



Audi A2 1.4 TDI

Replacing the light source

As the instructions for this vehicle are the same for both sides, they are stated here for one side only. First, switch the ignition off.

In order to gain access to the engine bay, the bonnet must be removed. Proceed as follows:

- Unlock the service flap from the vehicle interior and tilt the flap forwards (see Fig. 1).
- Turn the rotary knobs fully to the left and then pull them forwards (see Fig. 2).
- Lift the bonnet at the front (see Fig. 3,1), then pull forwards, out of the rear guides (see Fig. 3, 2), and remove it.

As the bulbs (low beam, high beam) are located deep inside the headlight and cannot therefore be seen from the rear, the use of a mirror is recommended during the various steps. In this way, for example, the bulbs can be checked to make sure they are fitted properly.

Driver side:

Low beam:

- Loosen the cover-cap fastening clamp and remove it from the rear headlight-housing (see Fig. 4). A little patience is required, as space is somewhat tight here. Fastening the cap also requires care.
- Remove the spring-wire clamp and replace the bulb (see Fig. 5).



High beam:

- See low beam for previous steps.
- In order reach the bulb better, press the headlight-range adjustment motor downwards (see Fig. 6).
- Remove the spring-wire clamp and replace the bulb.

Parklight:

- See low beam for previous steps.
- Pull the grip-type base out of the reflector and replace the bulb (see Fig. 7).

Indicator:

- See low beam for previous steps.
- Turn the grip-type base fully to the left and remove it from the housing together with the bulb (see Fig. 8).
- Replace the bulb.

Refit all the removed parts in reverse order. Check the lighting system to make sure it is in perfect working order. Check the headlight aim and, if necessary, adjust.



Fig. 1



Fig. 2



Fig. 3

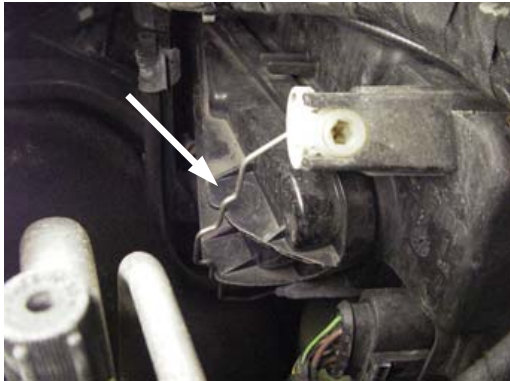


Fig. 4



Fig. 5



Fig. 6

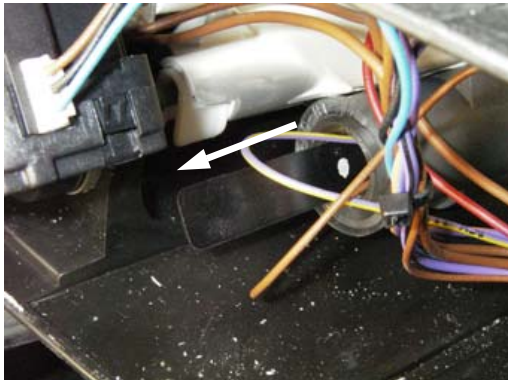


Fig. 7

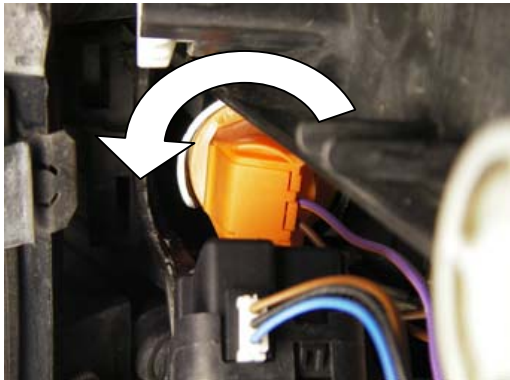


Fig. 8