© Hella KGaA Hueck & Co., Lippstadt

15. Februar 2005

Fiat Punto 55 **Type: 176** Model Year: 1993 - 1999

Battery discharged / Oil-pressure warning light illuminates after switching off the ignition

If the oil-pressure warning light illuminates on the above vehicles after the ignition has been switched off, or if the battery discharges during a journey, the cause may be a defective alternator diode plate.

If the oil-pressure warning light illuminates when the ignition is switched on, goes out after starting the engine, but illuminates after switching off the ignition, please proceed as follows:

• Does the alternator warning light illuminate when the ignition is switched on?

¥ No

 Remove the D+ connection cable from the alternator (Photo)

and connect this cable to earth. Does the alternator warning light illuminate?



Are all cable connections for the alternator/battery • system secure? Is the voltage drop in the tolerance range?

```
▼
Yes
 ¥
```







1-2



© Llolle KCeA Llucek & Ce. Lippetedt 15. Eebruar 2005	
© Hella KGaA Hueck & Co., Lippstadt 15. Februar 2005	2-2

• Replace the alternator. Check the charging voltage and the charging current. Check the operation of the oil-pressure warning light.

Suitable replacement alternators can be found in the Hella Starters/Alternators range.



