© Hella KGaA Hueck & Co., Lippstadt

5 December 2006

## *Fiat Punto MK 2 Model year 1999–2003 Control lamps stay on*

## After switching off the ignition, the control lamps stay on


As already stated, it may be that in the case of these Punto models, one or more warning lamps stay switched on when switching off the ignition.

Information update:

The battery itself no longer needs to be disconnected from the entire vehicle electric system; the removal of fuse number 53 with the ignition switched off is sufficient.

In the case of the Punto MK 2 models, a body control module is fitted which sends signals to the instrument unit via the CAN bus. In the case of some models, it may be that these signals are sent all the time, so that the control lamps stay switched on. By removing the fuse, the power supply of the control module is interrupted and the module is re-initialized.



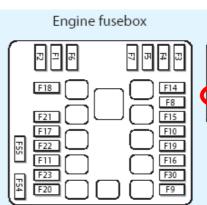

F36 F52 F45 F46   F39 F41 F47 F48   F34 F37 F49	Passenger fusebox						
F53 F40 F50 F42 F35   F31 F44 F51 F12 F13		F36 F39 F33 F33 F31	F52 F41 F43 F40 F44		F46 F37 F42 F12	F48 F49 F35 F13	





1-1