



## ***Land Rover Freelander All models with electric rear window***

### **Basic setting of the electrically-operated rear window.**

In the case of these vehicles, after disconnecting the battery, it may be that the electrically-operated rear window does not function correctly. In order to restore perfect function, a basic setting must be carried out. To do this, proceed as follows:

- Close the rear door of the vehicle.
- Ensure that the vehicle is unlocked and that the alarm system is deactivated.
- With the ignition switched on, close the rear window fully using the rear-window switch in the centre console.
- Hold the switch until the electric motor switches off of its own accord.
- The basic setting is complete. Release the switch and switch off the ignition.
- To finish off, carry out a functional test.

**Bulletin**

