



## MCC Smart

### Starting problems/immobiliser

If the above vehicles are not locked when left, the immobiliser is automatically activated after 5 minutes. When entering the vehicle again, it is not possible to start the engine without deactivating the immobiliser. The immobiliser is activated when the ignition key is in position "1" and a key symbol (see photo) can be seen in the gear display. In addition, a brief beep sounds 3 times when the ignition is switched on. The vehicle can then neither be started nor the can the gear be changed.



To deactivate the immobiliser, lock the vehicle and then open it again, or proceed as follows:

- Ignition key to position "0"
- Press one of the buttons (open, close) on the ignition key  
(1 beep signals that the immobiliser has been deactivated)
- Return the ignition key to position "1"  
(the gear display will show "1", "N" or "R")

#### Tip:

Instructions for deactivating the immobiliser can also be found on a sticker on the reverse side of the driver's sun visor.