



Opel

Various models

Model year: 2004 + 2005

With Blaupunkt radio CD30 MP3

CD-radio switches on and off of its own accord / Battery discharged

In the case of the above-mentioned vehicles, it may be that the CD-radio switches on and off of its own accord with the ignition switched off. Consequently, the battery may become discharged. One possible cause is the CD-radio itself. This problem can usually be resolved only by replacing the unit. From February 2005, modified units were used at the factory, meaning that the problem should not occur on vehicles made from this production date onwards.

