



Opel Frontera B Engine: 2.5 TDS, X22XE, X20SE

Wiper occasionally switches on when the indicators are operated

If the wiper occasionally switches on of its own accord when the indicators are operated, this may have something to do with a defective earth connection for the headlights. The problem occurs only occasionally and is not always reproducible. With the headlights switched on, check whether they flicker when the indicators are operated. If this is the case, the headlight earth points, which are located on the front right and left in the inner wing panel, should be checked. If necessary, the connections must be freed of corrosion and replaced.