



Opel Zafira II 1.6i Model year from 07.05

Replacing the light source

Since the working steps are identical for both sides for this vehicle, they are explained using one side as an example.

Low beam:

- Remove the service flap in the wheel housing (see Fig. 1).
- Separate the plug connection at the headlight. To do this, press the fastening clamp to the left and then pull the central plug off (see Fig. 2).
- Pull the rubber cap off the rear headlight housing.
- Turn the bulb socket anticlockwise and then remove it from the reflector with the bulb (see Fig. 3).
- Use a small screwdriver to bend the fastening clamp as far as necessary until it can be pushed over the locating lug (see Fig. 4).
- Replace the bulb.

Indicator:

- Remove the rubber cap (see Fig. 5).
- Turn the bulb socket anticlockwise and then remove it from the headlight with the bulb (see Fig. 6). Since the socket is a tight fit, flat nose pliers can be used to make removal easier.

High beam and parklight:

Bulletin





- Pull the rubber cap off and replace the respective bulb (see Fig. 7).

Replace all the removed components in reverse order. Check the lighting system to make sure it is in perfect working order. Check the headlight setting and adjust if necessary.



Fig. 1



Fig. 2

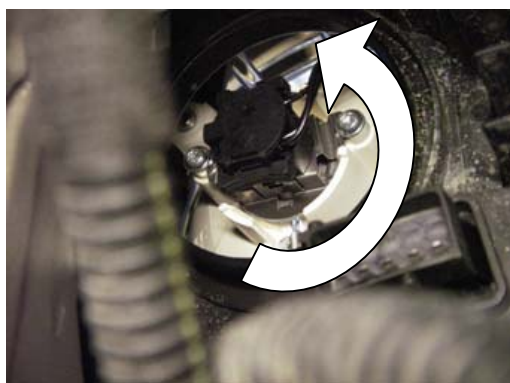


Fig. 3



Fig. 4

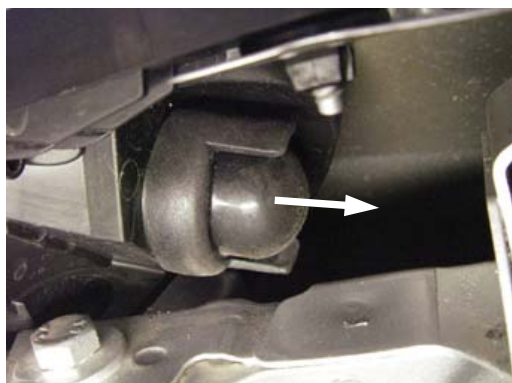


Fig. 5

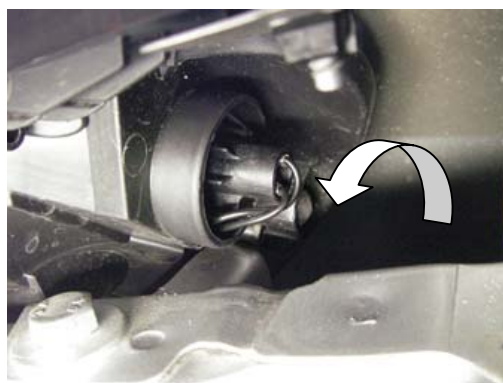


Fig. 6



Fig. 7