



## ***Peugeot 406 With HDI engine Model year 1998 - 2004***

### **Engine does not start.**

If there are complaints with these vehicles that the engine does not start, one possible cause is a blown fuse. In this case, fuse no. 25, for the fuel feed pump, is affected. This fuse is in the fuse box in the engine compartment. The reason for the blown fuse is not a technical fault but the fact that the capacity of the fuse is too low. To eliminate the fault, replace the blown 10-amp fuse with a 15-amp fuse.

**Bulletin**