



RENAULT Espace IV All engines

Replacement of lamps

The replacement of the lamps takes place as follows:

Rear light:

Position, brake, indicator, fog and reversing light:

- Switch off the ignition.
- Unscrew the rear light fastening screws (see Fig.1).
- The lamp is fastened in the body at two points with ball head elements (see Fig. 2).
- Carefully press a rubber wedge between the body and the lamp until the ball head elements come loose from the brackets (see Fig. 3) **Caution!** Do not use a screwdriver for this. There is a danger that parts may break out of the lamp if the pressure surface or contact surface is too small.
- Release the four latching mechanisms such that the lamp holder can be removed from the lamp (see Fig. 4).
- Replace the corresponding lamp in the lamp holder (see Fig. 5).

Re-install all disassembled parts in a sensible order. Check the light system for function.



Fig. 1



Fig. 2



Fig. 3

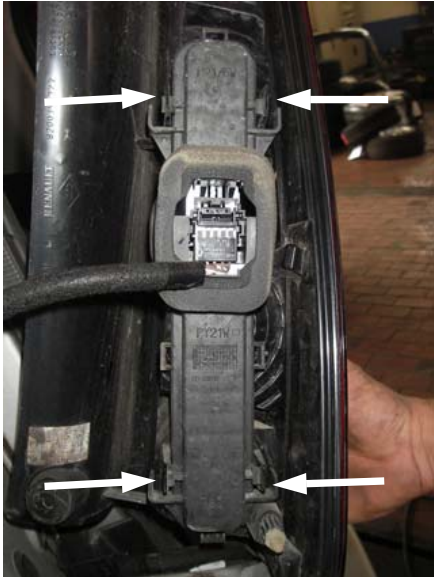


Fig. 4





Fig. 5