



Rover 200

Model years 1995-1999

With engines from the K and T series

Engine doesn't start up or continues to run when the ignition has been switched off.

If there are complaints with these vehicles that the engine does not start up or continues to run after the ignition has been switched off, one possible cause is a poor ground connection. This causes voltage problems at the engine control unit and to problems with the immobiliser signal from the control unit of the alarm system. The ground connection on the front plate next to the battery is affected.

To eliminate the fault proceed as follows:

- Loosen the ground connection.
- Clean the connection, the screw thread, the screw and the body contact area. No residue paint or corrosion may remain on the contact areas.
- Screw the ground cable back on again.
- Protect the ground connection from repeated corrosion.

Check whether the vehicle starts up correctly and the engine can be switched off.