



Rover 75 Facelift with Xenon light

Light source replacement

To replace the light source in the above-mentioned vehicle, proceed as follows:

- Switch off the ignition.
- Remove the attachment screws from the front apron (8 at the top, 10 at the bottom and 2 each in the wheel housings, see Fig. 1).
- Pull the apron out of the brackets and off to the front. Set it down on a soft surface ⇒ danger of scratching.
- Remove the attachment screws from the headlight (see Fig. 2 and 3).
- Remove the central plug.
- Pull the headlights off forwards.
- Remove the Torx screws from the headlight cover and take these off the headlight (see Fig. 4).
- Turn the ignition module anti-clockwise. The cable plug is automatically pushed out of the module (see Fig. 5).
- Pull the ignition model off the Xenon light.
- Push the spring-loaded hoop together and fold away (see Fig. 6).
- Replace the Xenon light source.
- Parking light, indicator and driving light can be replaced easily.
- Replace the removed parts in reverse order.
- Check the system for perfect function.
- Adjust the headlights with the aid of a diagnosis tester (read out fault code, basic setting of headlight levelling etc.).



Fig. 1

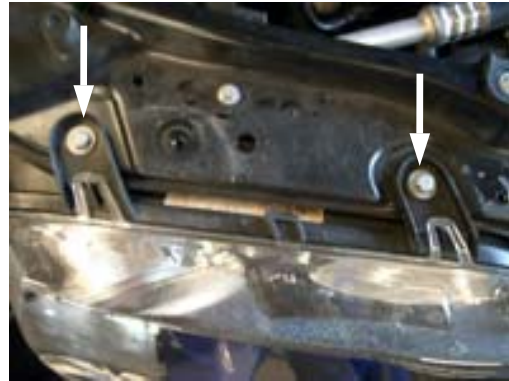


Fig. 2



Fig. 3

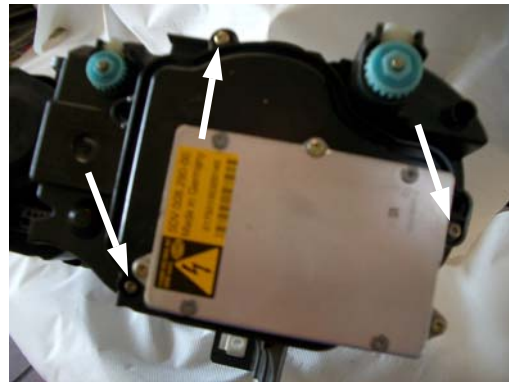


Fig. 4

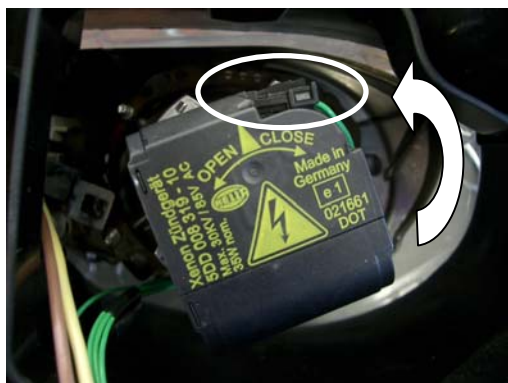


Fig. 5



Fig. 6