



Renault

Scenic II (JM0/1)

Model year: from 2003

Engine: 1.9 dCi

With xenon low beam

Replacing the light sources

In the case of this vehicle, the working steps for light-source replacement are almost identical for both sides. For this reason, bulb replacement on the right-hand headlight (direction of travel) is described by way of example. Although it may be possible to replace one light source or another without removing the headlight, the description should, however, be followed in this case. Only in this way can it be ensured that the light sources are seated properly and that no damage occurs:

- Switch off the ignition
- Open the bonnet
- Remove the cover above the headlight (Fig. 1)
- Remove the screws and plugs of the bumper, in the area of the lock carrier (Fig. 2)
- Remove the fastening screws (2x) of the headlight (Fig. 3)
- Remove the front screws of the lower engine cover
- Remove the screws of the mudguard panelling (right and left, 2x each) (Fig. 4)
- Pull the bumper forwards slightly
- Disconnect the electrical plug-type connectors for auxiliary lights that may be fitted
- Disconnect the hoses for the headlight cleaning system and close them off
- Remove the bumper
- Remove the lower fastening screws (2x) for the headlight, and remove the mounting bracket $\square A \square$ (Fig. 5)



- Pull the headlight forwards
- Replace the bulbs; if necessary, remove the covers and disconnect the electrical plug-connections in order to be able to remove the headlight completely (Fig. 6)
- Carry out a functional test
- Assemble the components in reverse order
- Check the headlight adjustment



Fig. 1



Fig. 2



Fig. 3



Fig. 4

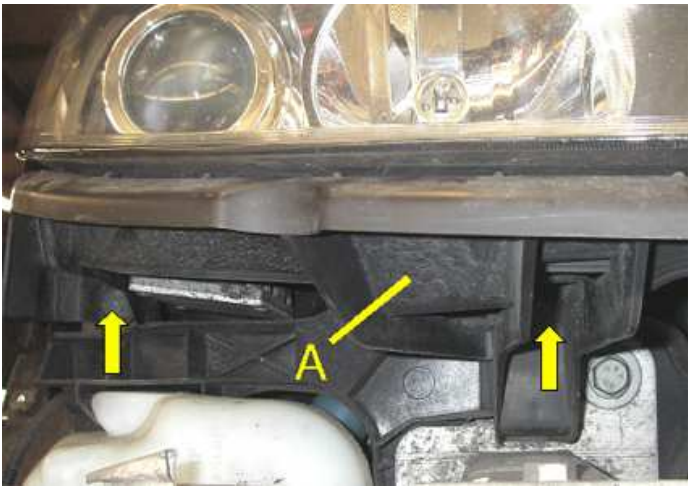


Fig. 5



Fig. 6

