


© Hella KGaA Hueck & Co., Lippstadt 8 January 2007 1-2

Fiat Stilo All vehicles

Airbag light illuminates

If there are complaints about the above-mentioned fault, the cause could be defective plug-connections on the airbag/safety-belt cable loom. These are located under the driver seat. In this case, proceed as follows:

- Disconnect the battery.
- Remove the holder for the plug-connections (see Fig. 1, Item 1).
- With the aid of a small screwdriver, lever the plugconnection of the airbag cable loom out of the holder (see Fig. 1, Item 2).
- Feed cable clips through the holder of the plugconnection (see Fig. 2).
- Wrap insulating tape around the plug-connection, such that both plug ends are fixed to one another.
- After this, fasten the plug-connection with the cable clip onto the holder (see Fig. 3).
- Refit the holder under the driver seat, connect the battery and delete the fault memory.

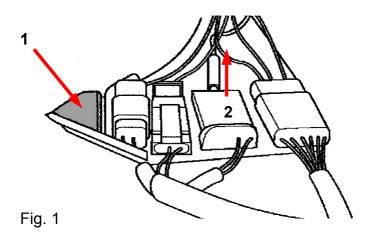





Bulletin



© Hella KGaA Hueck & Co., Lippstadt 8 January 2007 2-2

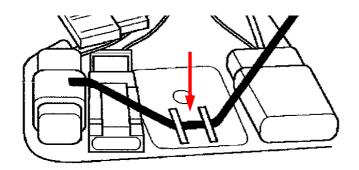


Fig. 2

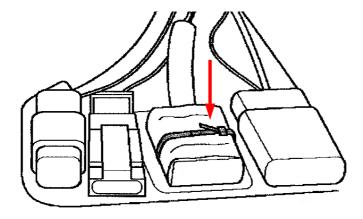


Fig. 3

